



## Pectinase Response Satsuma Stain

The level of pectinase enzyme response shown by natural stains supplied by Warwick Equest, was evaluated by performing a series of wash tests under European conditions using a non-biological commercial liquid detergent. A clean ballast load has been used to show optimum levels of stain removal.


Results shown below are for 5cm stain circles, prepared on 100% knitted cotton, white fabric.

Wash Conditions:

- European Machine – Miele W487
- 40°C wash programme (104°F)
- Normal wash, cotton cycle
- 3.5Kg clean ballast load
- Commercial detergent dose 75g (12.5g/l)

As pectinase enzyme dose is increased, the level of stain removal also increases. The level of enzyme required to deliver maximum stain removal varies by stain type.

### Pectinase Enzyme Response Satsuma

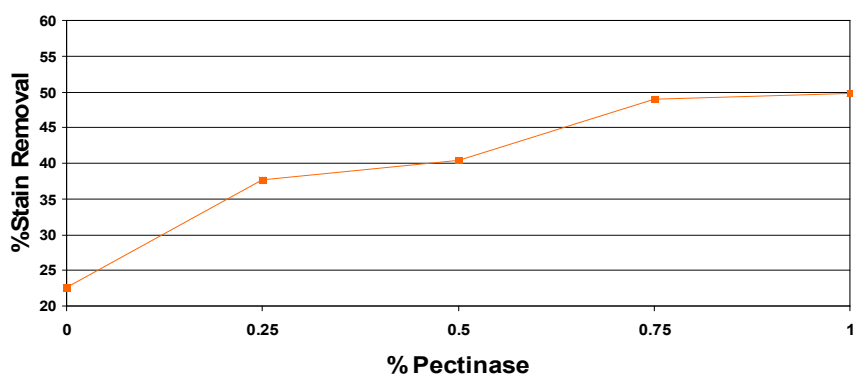

For more details relating to stain selection and options, please contact us:  
[enquiries@warwickequest.com](mailto:enquiries@warwickequest.com)

Ref: EQUEST ENZ-PE5 – SATSUMAS